



Entrust nShield 5c 10G Quick Start Guide

2025-07-16

Table of Contents

1. Requirements.....	2
----------------------	---

This guide shows how to configure a nShield 5c 10G and setup on a KeySafe 5 machine for the first time. For more detailed information about setup procedures and options, see the *Installation Guide* and *User Guide* for nShield HSMs.

Chapter 1. Requirements

- 2x Ethernet port devices: Small Form-factor Pluggable + (SFP+)
- 1x RJ45 to USB A 2.0 Male cable

To configure the nShield 5c 10G, you must use a serial console command line through the console port. You can use a serial port aggregator or the serial session software of your choice.

The default CLI credentials are `cli/admin`. You will be required to change the password once you login as the `cli` user. The new password must be at least 8 characters long.

- 1x host to configure the HSM using the CLI - serial console command line (direct or through a switch)
- 1x server/VM for the KeySafe 5 installation (optional if you already have installed KeySafe 5)
- 1x server/VM to act as the client that will use the HSM